

## Wideband 400W EMC Solid State Power Amplifier 6-18GHz



### Typical Applications

- Wireless Infrastructure
- Military and Aerospace Applications
- Test Instrumentation
- Radar Systems
- 5G Wireless Communications
- Microwave Radio Systems
- TR Modules
- Research and Development
- Cellular Base Stations

### Product Description

REMC06G18GG is a wideband EMC power amplifier with wide frequency range of 6 to 18GHz.

### Features

1. Small Signal Gain 70dB Typical
2. Digital Control Attenuator 31.5dB max, 0.5db step
3. Psat 56dBm Typical
4. Power supply: 3-phase VAC. Compatible for USA and EU standard.
5. 50 Ohm Matched Input/Output
6. Protection Functions:
  - Over temperature
  - Over current
  - Current imbalance
  - RF input over drive protection
  - VSWR protection
7. Amplifier Automatic Calibration Function
8. RF Output Power Display
9. RF Output Enable Function
10. High Maximum RF Input Power Handling, 10W max
11. Ethernet Remote Control
12. 5-inch LCD Front Panel Display Screen

### Electrical Specifications (T<sub>A</sub>=+25°C)

Parameter	Min	Typ	Max	Units
Frequency Range		6 – 18		GHz
Small Signal Gain		70		dB
Gain Flatness		+/-10		dB
Gain Variation Over Temperature (-40°C to +70°C)		+/-5		dB
Input Return Loss		-18		dB
*Output 1dB Compression Point (P1dB)		51		dBm
*Saturated Output Power (Psat)		56		dBm
Supply Current ( 3-phase 208VAC)		10	30	A
IM3		-30		dBc
RF ON and OFF Speed. (Gate/Drive control through d-sub connector)		80/2500		us
Power Added Efficiency (PAE)		20		%
Weight		90/40.8		Lbs/KG
Impedance		50		Ohms
Input / Output Connectors	N-Type Female			
Package	Please see the mechanical drawing			

\* P1dB, P3dB and Psat power test signal: 200µs pulse width with 10% duty cycle.

**Absolute Maximum Ratings**

Parameter	Rating
Supply Voltage	200-240 VAC or 380-415 VAC 3-phase, 50/60Hz, 5.5kWatts (User Must Specify in PO)
*RF Input Power (RFIN)	Psat – Large Signal Gain

**Bias Up Procedure**

1. Connect input and output with 50 Ohm source/load. (In band VSWR < 1.9:1 or >10dB return loss.)
2. Connect Power Cable
3. Turn On Back Panel AC Power Supply Air Breaker
4. Press Front Panel Power Switch to Power Display

**Bias Down Procedure**

1. Press Front Panel Power Switch to Power Off Display
2. Turn Off Back Panel AC Power Supply Breaker
3. Remove Power Cable (If Moving Equipment)
4. Disconnect input and output with 50 Ohm source/load. (In band VSWR < 1.9:1 or >10dB return loss.)

**Environmental Specifications and Test Standards**


Parameter	Description
Operational Temperature	-30°C to +50°C (Case Temperature)
Storage Temperature	-55°C to +125°C
Thermal Shock	-40°C → +85°C (5 Cycles / 10 hours)
**Random Vibration	MIL-STD-202G Table 214-I, Test Condition Letter C 1.5 Hours Per Axis
High Temperature Burn In	Temperature +85°C for 72 Hours
Shock	1. Weight >20g, 50g half sine wave for 11ms, Speed variation 3.44m/s 2. Weight <=20g, 100g Half sine wave for 6ms, Speed variation 3.75m/s 3. Total 18 times (6 directions, 3 repetitions per direction).
Altitude	Standard: 30,000 Ft (Epoxy Sealed Controlled Environment) Optional: Hermetically Sealed (60,000 ft. 1.0 PSI min)
Hermetically Sealed (Optional)	MIL-STD-883 (For Hermetically Sealed Units)

\*Maximum RF input power is set to assure safety of amplifier. Input power may be increased at own risk to achieve full power of amplifier. Please reference gain and power curves.


\*\*For vibration testing details please see additional information section.

**Typical Performance Plots**


**Input Return Loss @+25°C**

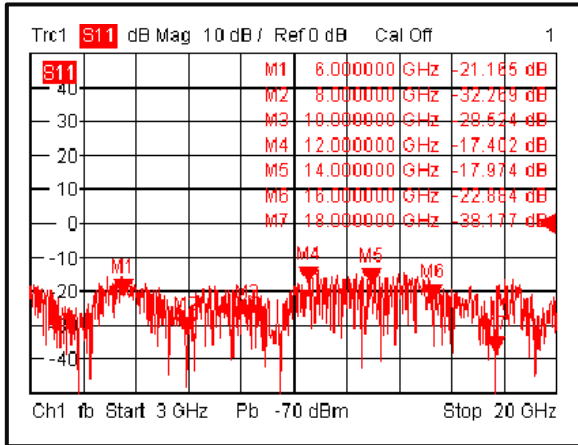


**Gain vs. Frequency @+25°C  
With default 20dB Attenuation**

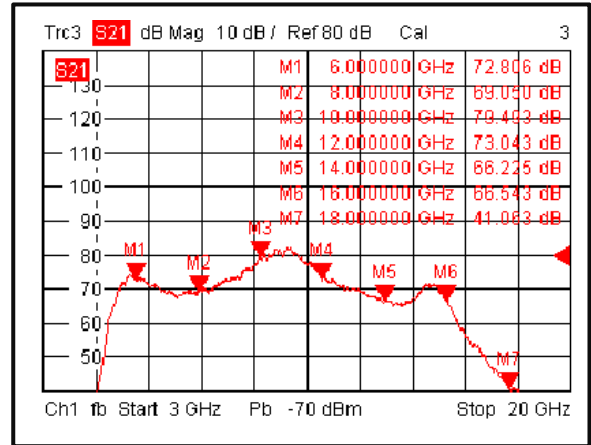

**Input Return Loss @+25°C**

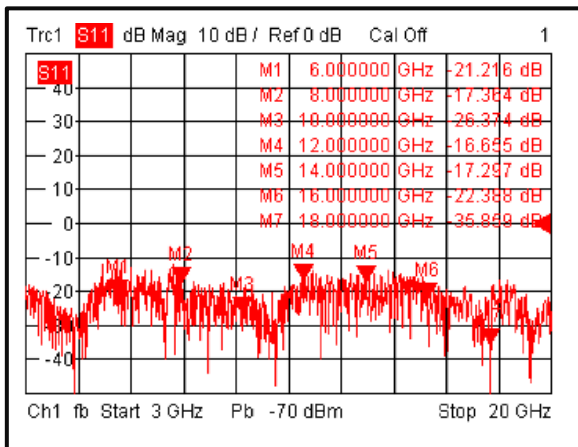

**Gain vs. Frequency @+25°C  
With 0dB Attenuation**

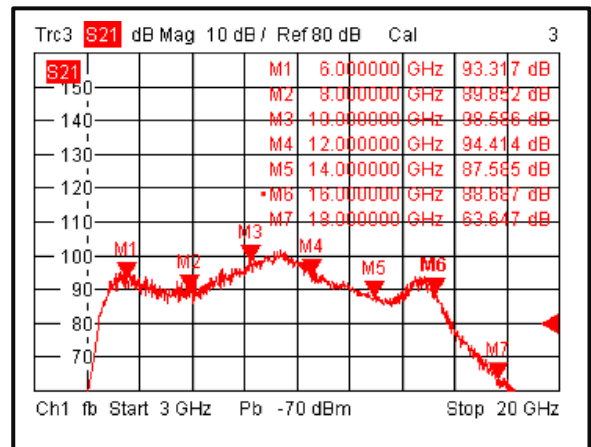


Product is equipped with total 31.5dB adjustable attenuation, 0.5dB step


Note: Small signal VNA measurements include attenuators to protect equipment

**Typical Performance Plots**


**Gain vs Output Power CW**  
With default 20dB Attenuation

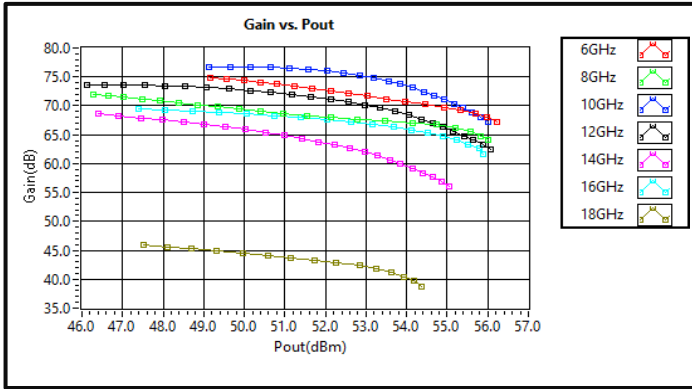

**Output vs Input Power CW**  
With default 20dB Attenuation

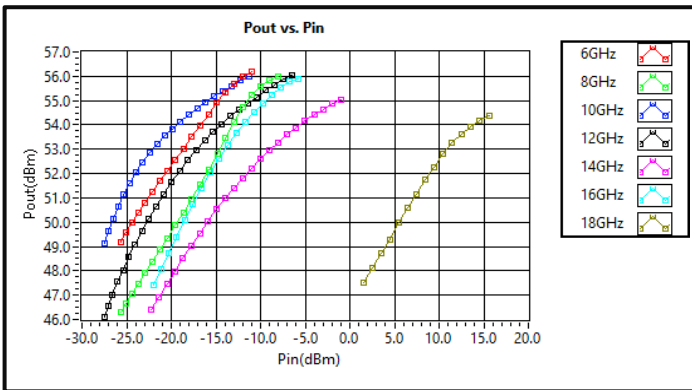


**PxdB vs Frequency CW**  
With default 20dB Attenuation

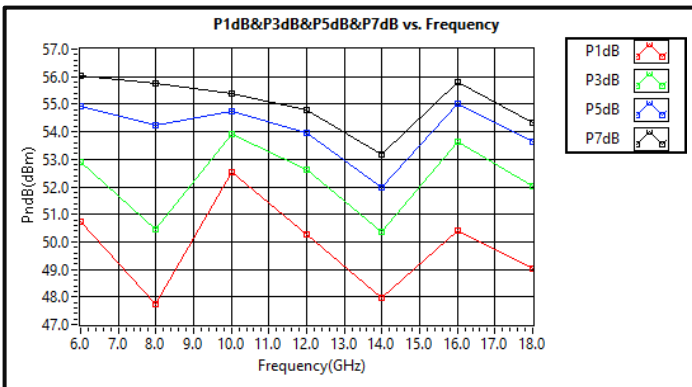


Typical Performance Plots


Left IM3 vs Output Power

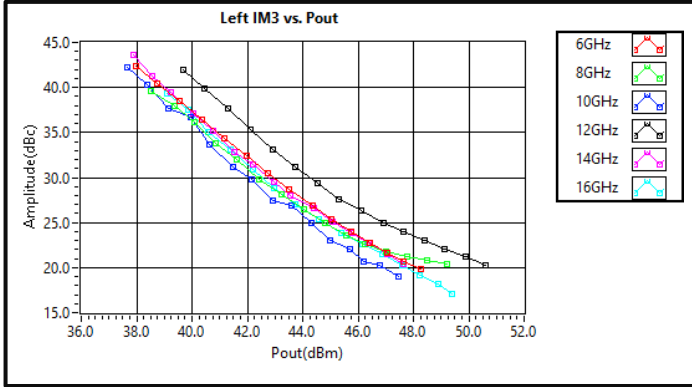


Right IM3 vs Output Power

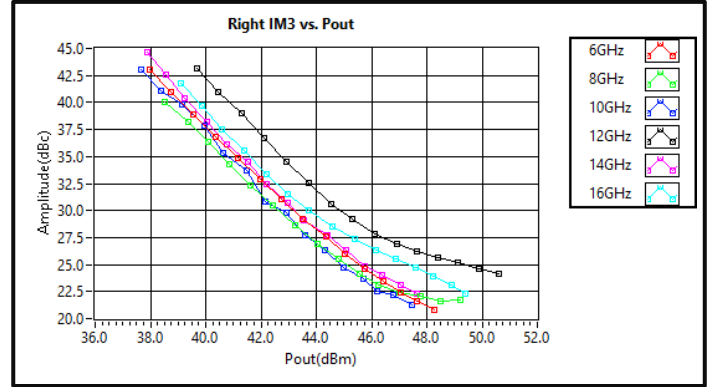


Delta IM3 vs Output Power

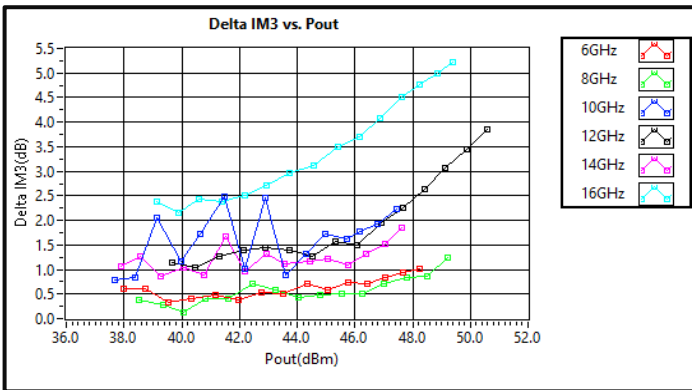


2<sup>nd</sup> Harmonics

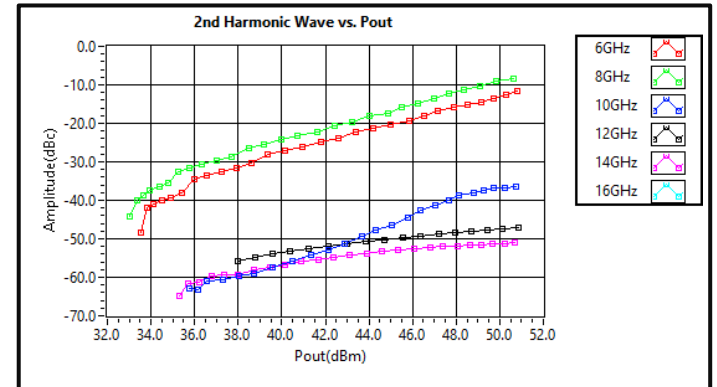

3<sup>rd</sup> Harmonics

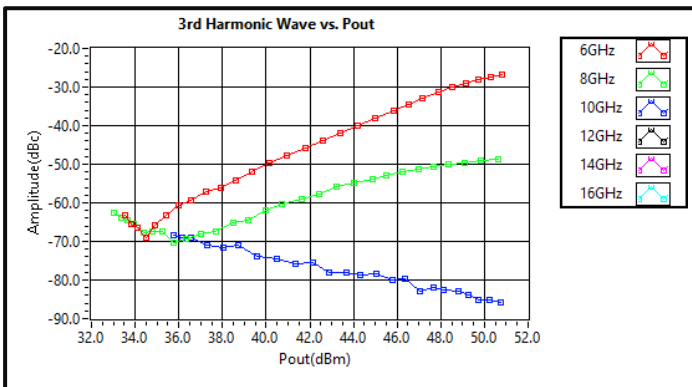


4<sup>th</sup> Harmonics

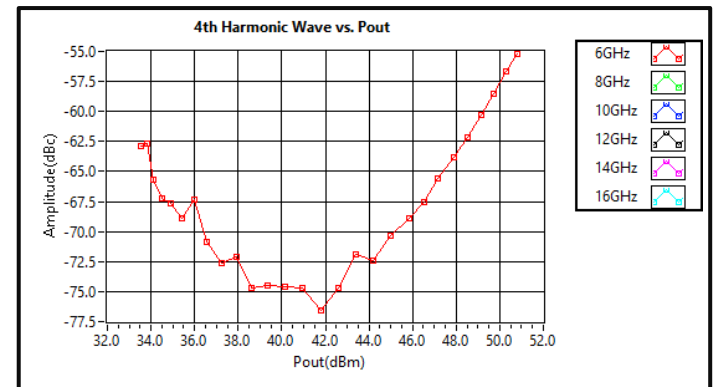


Note: IM3 test performed with 1MHz tone spacing

**EMC Equipment Specifications**

**Front Panel**

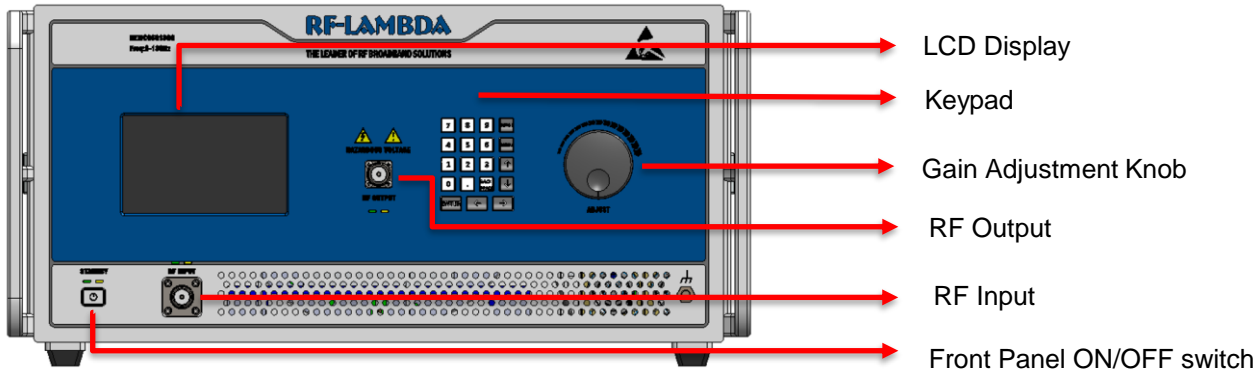


**Rear Panel**

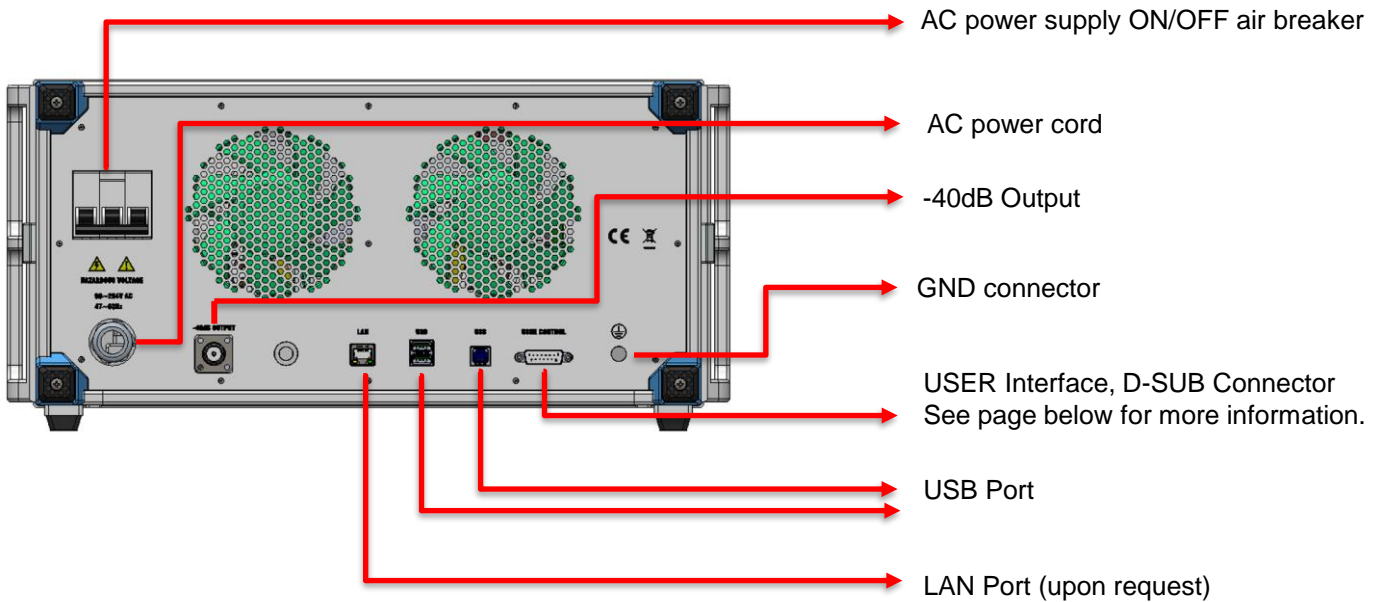


**Front Panel LCD Screen Display**

**Switching On Instrument**

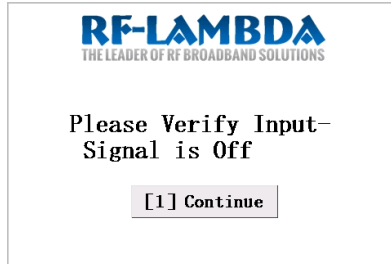

Please follow the instructions on the front panel LCD screen after switching on the power. Press "1" on keypad to continue.

**Self Calibration Screen**



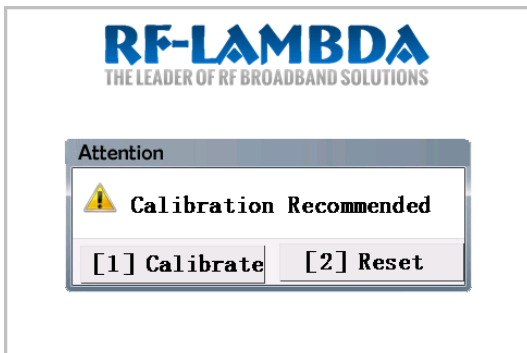


Calibration is may be recommended "[1] Calibrate" to execute instrument self calibration process.

"[2] Reset" to reboot the instrument.

\*Please turn OFF RF input power, and terminate the RF output port while applying calibration function

**Instrument Protection Alarms**

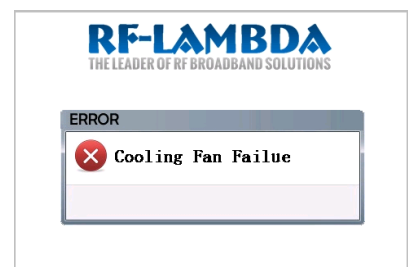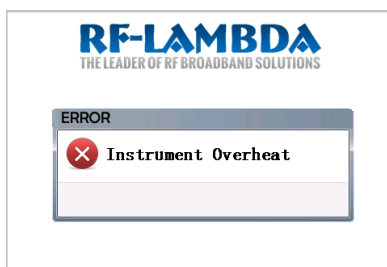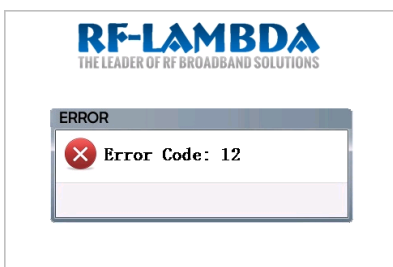


The front panel LCD screen will display the error code or error message when instrument self protection is triggered. Front panel alarm indicator will light up.

To eliminate the error code, press "RESET" on front panel keypad to reboot the instrument and clear the alarms. If error code can not be eliminated after reboot, please contact support@rflambda.com

**Front Panel LCD Screen Function**

**Instrument Status Display Page**

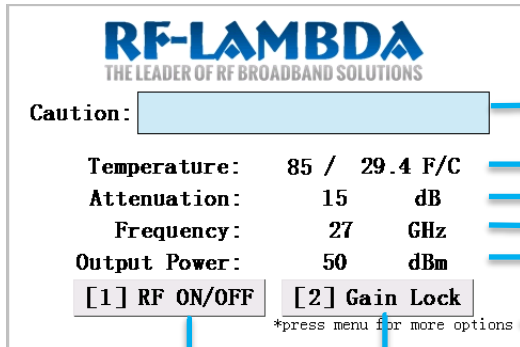

Indicates instrument RF output status. It will display: Output is Ready to Turn on or RF Output is ON

Instrument temperature

RF output attenuation (change with adjustment knob)

RF input signal center frequency


Instrument RF output power

Press "Menu" on keypad to enter instrument functions selection menu

User can set a constant gain for the unit. Equipment will automatically adjust the gain at certain frequency

Switches On or Off for instrument RF output port

**Instrument Function Selection Page**

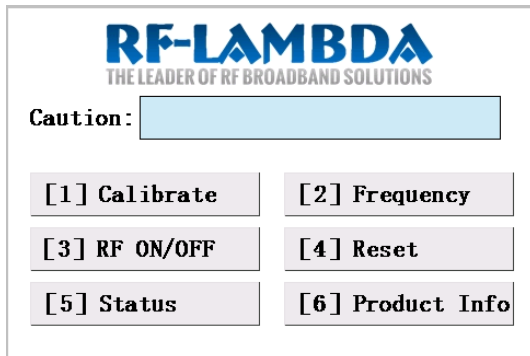

To enter this function selection page, press "Menu" on front panel keypad while the instrument is showing the status page. Press the corresponding number on front panel keypad to select:

"[1] Calibrate" calibrates the instruments.




"[2] Frequency" enters RF input signal center frequency.

"[3] RF ON/OFF" switches the RF output port on or off.

"[4] Reset" Restarts the instrument (Turns RF output off)

"[5] Status" enters instrument status display page.

"[6] Product Info" displays product part number and serial number

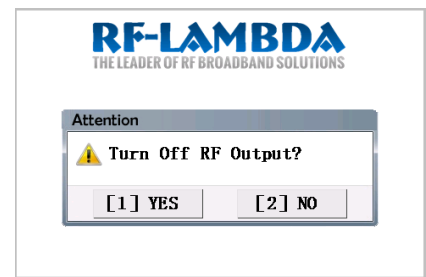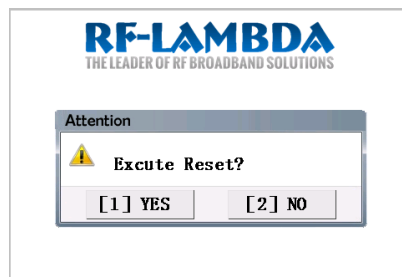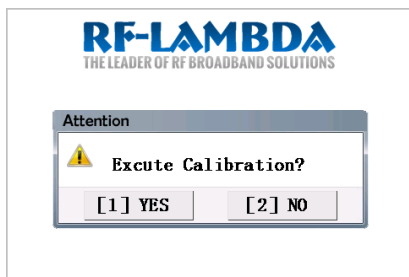

All action functions will ask for confirming execution when selected from function selection menu.



**Protection Connector Table**

Male D-Sub is on the housing  
The mating male part number: 172-E15-203R001




Pin #	Name	Function	Initial State	Description	Applied
1	Reset	Control		Resets PA when logic <u>LOW</u> is applied and released	Yes
2	Gate Disable	Control	LOW	Applying logic <u>HIGH</u> disables gate of amplifiers	Yes
3	Drian Disable	Control	LOW	Applying logic <u>HIGH</u> disables drains of amplifiers	Yes
4	RF IN Over	Indicator	HIGH	Pin will be latched to logic <u>LOW</u> when input signal is over limit	Yes
5	Temp Over	Indicator	HIGH	Pin will be latched to logic <u>LOW</u> when amplifier is driven over temperature	Yes
6	Current Over	Indicator	HIGH	Pin will be latched to logic <u>LOW</u> when drain current limit is reached	Yes
7	ID Imbalance	Indicator	HIGH	Pin will be latched to logic <u>LOW</u> when an imbalance in the drain current of the combining branches occurs	Yes
8	PA Off Alarm	Indicator	HIGH	Pin will be latched to logic <u>LOW</u> when any of the protection limit is reached	Yes
9	Fan Alarm	Indicator	HIGH	Pin will be latched to logic <u>LOW</u> when Fan limit is reached	Yes
10	GND	Ground	GND	PA output reflection power is represented by voltage	Yes
11	VSWR	Indicator	HIGH	Pin will be latched to logic <u>LOW</u> when output reflection is over limit	Yes
12	GND	Ground	GND	PA carrier case temperature is represented by voltage	Yes
13	+5V	Power Supply	+5V	+5V DC is available for reference 400mA current ability	Yes
14	GND	Ground	GND	Ground	Yes
15	NC	NC	NC	NC	NC

Notes:

- HIGH/LOW voltages are standard TTL signals 0.0V-0.8V = LOW. 2V-5V = HIGH. Input current is 10uA.
- Matching connector and cable will be shipped with the product.
- Applied=Yes means the feature is included. Applied=No means the feature is not included with this model.
- 5V reference supply can source 700mA.
- Indicator output signals can source 24mA.


**Outline Drawing**

All dimensions are in mm [inches]

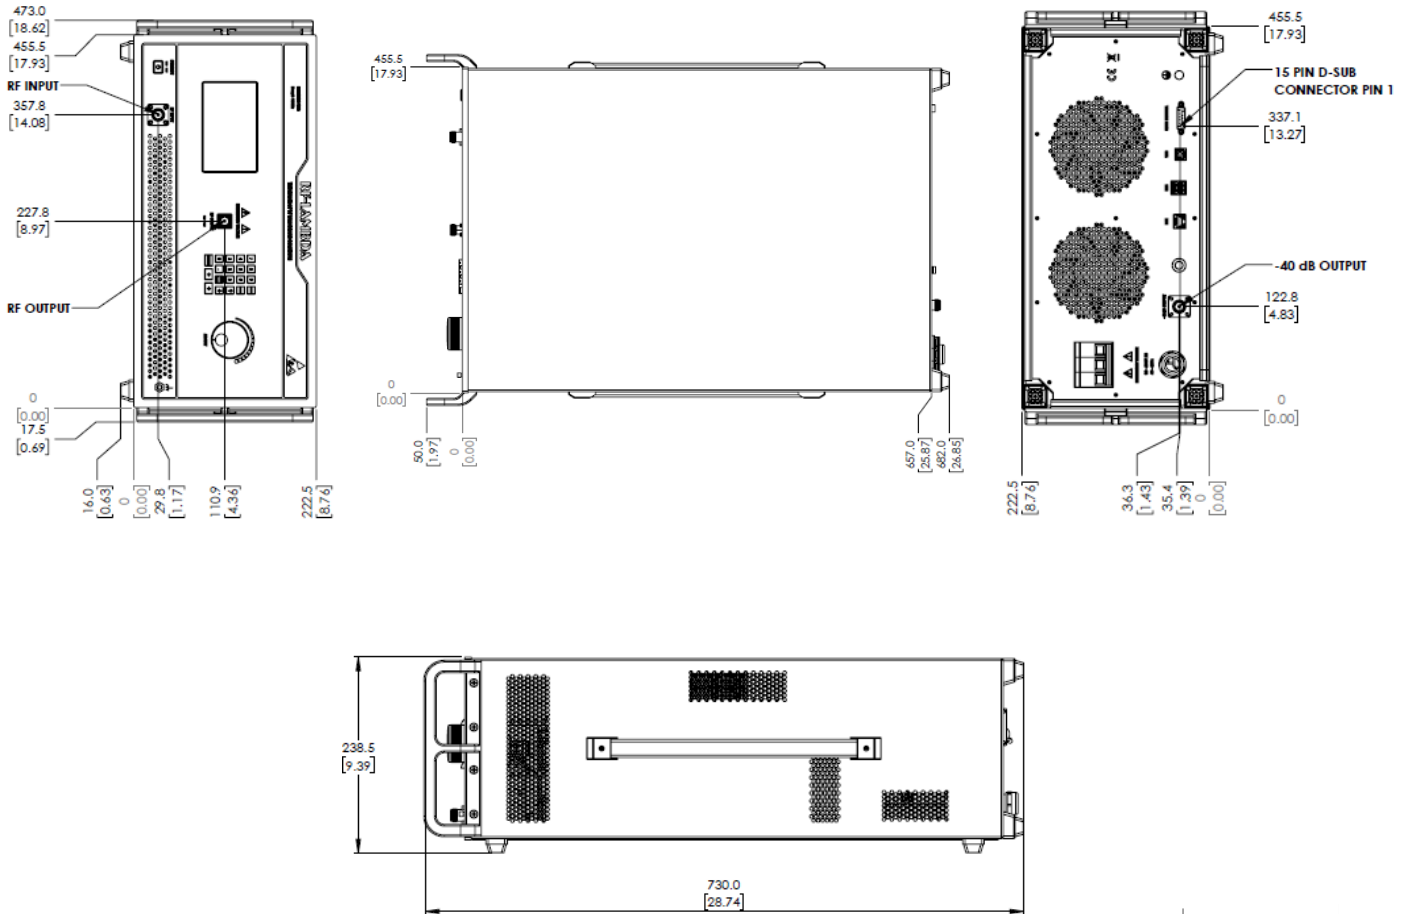

Notes:

1. All dimensions are in millimeters [inches].

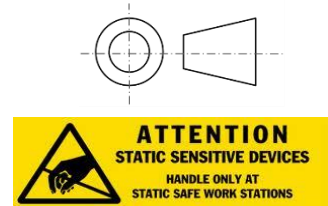

Additional Information

Documentation	Webpage
ESD Policy	<a href="https://rflambda.com/pdf/rflambda_esd_control.pdf">https://rflambda.com/pdf/rflambda_esd_control.pdf</a>
Heatsink Lookup Specifications	<a href="https://rflambda.com/search_heatsink.jsp">https://rflambda.com/search_heatsink.jsp</a>
Connector Torque Specifications	<a href="https://www.rflambda.com/pdf/Torque_Specifications.pdf">https://www.rflambda.com/pdf/Torque_Specifications.pdf</a>
Random Vibration Test Standard	<a href="https://www.rflambda.com/pdf/rflambda_random_vibration_MIL-STD-202G.pdf">https://www.rflambda.com/pdf/rflambda_random_vibration_MIL-STD-202G.pdf</a>

**VAC Power Supply Plug**

**America  
Configuration:  
L21-30P PLUG**



or

**EU CEE32  
Configuration:**



\*Power supply plug type should be requested with PO



**Ordering Information**

Part Number	Modification	Description
REMC06G18GG	Input connector N-Type and Output connector N-Type	6GHz-18GHz EMC Benchtop Power Amplifier



Each amplifier is shipped in a well protected package.

**Amplifier Use**

Ensure that the amplifier input and output ports are safely terminated into a proper 50 ohm load before turning on the power. Never operate the amplifier without a load. A proper 50 ohm load is defined as a load with impedance less than 1.9:1 or return loss larger than 10dB relative to 50 Ohm within the specified operating band width.

Power Supply Requirements

Power supply must be able to provide adequate current for the amplifier. Power supply should be able to provide 1.5 times the typical current or 1.2 times the maximum current (whichever is greater).

In most cases, RF - Lambda amplifiers will withstand severe mismatches without damage. However, operation with poor loads is discouraged. If prolonged operation with poor or unknown loads is expected, an external device such as an isolator or circulator should be used to protect the amplifier.

Ensure that the power is off when connecting or disconnecting the input or output of the amp.

Prevent overdriving the amplifier. Do not exceed the recommended input power level.

Adequate heat-sinking required for RF amplifier modules. Please inquire.

Amplifiers do not contain Thermal protection, Reverse DC polarity or Over voltage protection with the exception of a few models. Please inquire.

Proper electrostatic discharge (ESD) precautions are recommended to avoid performance degradation or loss of functionality.

What is not covered with warranty?

Each RF - Lambda amplifier will go through power and temperature stress testing.

Since the die, ICs or MMICs are fragile, these are not covered by warranty. Any damage to these will NOT be free to repair.

**Important Notice**

The information contained herein is believed to be reliable. RF-Lambda makes no warranties regarding the information contained herein. RF-Lambda assumes no responsibility or liability whatsoever for any of the information contained herein. RF-Lambda assumes no responsibility or liability whatsoever for the use of the information contained herein. The information contained herein is provided "AS IS, WHERE IS" and with all faults, and the entire risk associated with such information is entirely with the user. All information contained herein is subject to change without notice. Customers should obtain and verify the latest relevant information before placing orders for RF-Lambda products. The information contained herein or any use of such information does not grant, explicitly or implicitly, to any party any patent rights, licenses, or any other intellectual property rights, whether with regard to such information itself or anything described by such information.

RF-Lambda products are not warranted or authorized for use as critical components in medical, life-saving, or life sustaining applications, or other applications where a failure would reasonably be expected to cause severe personal injury or death.